
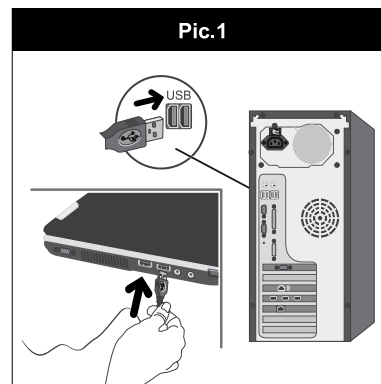


**CANYON**  
YOU CAN

**Wired multimedia keyboard KB-50**  
**Quick Guide v 1.1**

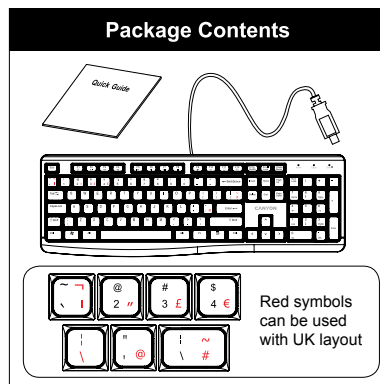

**Warranty**

**EN:** For the detailed information regarding warranty terms, please refer to: <http://canyon.eu/warranty-terms/>

**BG:** За повече информация относно гаранционните условия, моля посетете: <http://canyon.bg/ogranicheniya-na-garantsiyata/>

**HU:** A részletes garanciális információk megtekintéséhez látogasson el a <http://hungary.canyon.eu/a-korlatozott-jotallas/>

**RO:** Pentru conditiile specifice de garantie, vizitati: <http://canyon.ro/garantie-produse/>

**SK:** Viac informácií o záručných podmienkach je uvedených na internetovej stránke <http://canyon.sk/prehlasenia-o-zaruke/>

**SI:** Podrobne informacije o garancijskih pogojih najdete na strani: <http://canyon.eu/warranty-terms/>

**RS:** Za detaljnije informacije o uslovima garancije obratite se: <http://canyon.eu/warranty-terms/>

**LV:** Detalizēta informācija par garantijas noteikumiem atrodama: <http://canyon.eu/warranty-terms/>

**LT:** Detalesnė informacija apie garantiją sąlygas rasite tinklapyje: <http://canyon.eu/warranty-terms/>

**EE:** Detailse info garantitingimuste kohta leiate: <http://canyon.eu/warranty-terms/>

**WARRANTY**

The warranty period starts from the day of the product purchase from Canyon authorized Seller. The date of purchase is the date specified on your sales receipt or on the waybill. During the warranty period, repair, replacement or refund for the purchase shall be performed at the discretion of Canyon. In order to obtain warranty service, the goods must be returned to the Seller at the place of purchase together with proof of purchase (receipt or bill of lading). 2 years warranty from the date of purchase by the consumer. The service life is 2 years. Additional information about the use and warranty is available at <https://canyon.eu/warranty-terms/>

Date of manufacture: (see at the package). Made in China

**Manufacturer:** Asbisc Enterprises PLC, 43, Kolonakiou Street, Diamond Court 4103 Ayios Athanasios <http://canyon.eu>



**ГАРАНЦИЯ**

Гаранцията започва да тече от деня на покупка на продукта от оторизиран търговец на CANYON. Датата на покупка е видима на касовата бележка или товарителница. По време на гаранцията може да се извърши ремонт, замяна или връщане на сумата по усмотрение на CANYON. За да получите гаранционно обслужване, продуктът трябва да се върне на Търговеца на място в обекта с касова бележка или товарителница. Гаранция: 2 години от датата на покупка от клиента. Сервизното обслужване е в рамките на 2г.

**Производител:** Asbisc Enterprises PLC, 43, Kolonakiou Street, Diamond Court 4103 Ayios Athanasios <http://canyon.eu>

Дата на производство: (вижте на опаковката). Произведено в Китай.

Продуктът е в съответствие с изискванията на Директива 2015/863/EC (or other) Всички декларации може да изтеглите от уеб сайт <https://canyon.bg/certifikati/> и/или <http://canyon.eu/certificates>, търсейки по модела на устройството.



**SAFETY INSTRUCTIONS**

Read carefully and follow all instructions before using this product.

- Do not expose the mouse to excessive moisture, water or dust. Do not install in rooms with high humidity and dust level.
- Do not expose the mouse to heat: do not place it close to heating appliances, and do not expose it to direct sun rays.
- The product shall be connected to the power supply source of the type indicated in the operation manual only.
- Never spray liquid detergents. Use only dry clothes for device cleaning.

type indicated in the operation manual only.

**WARNING**

It is forbidden to dismantle the device. Attempt to repair this device is not recommended and leads to cancellation of the warranty.

**Multimedia function keys:**

<b>Fn + F1</b> Music player	<b>Fn + F5</b> Previous song
<b>Fn + F2</b> Volume -	<b>Fn + F6</b> Next song
<b>Fn + F3</b> Volume +	<b>Fn + F7</b> Play/Pause
<b>Fn + F4</b> Mute	<b>Fn + F8</b> Stop



**ИНСТРУКЦИИ ЗА БЕЗОПАСНОСТ**

Прочетете внимателно и следвайте всички инструкции

- Пазете устройството от влага, вода или прах. Не го поставяйте в стаи с висока степен на влажност или замърсяване.
- Пазете го от топлина: не го поставяйте в близост до нагревателни уреди или на пряка слънчева светлина
- Използвайте само източници на захранване, които са упоменати в ръководството за потребителя.
- Почиствайте само със сухи кърпи. Не разливайте течности върху продукта.

**ВНИМАНИЕ**

Забранено е разглобяването на устройството. Всички опити за ремонт ще направят гаранцията невалидна.

**Мултимедийни функционални клавиши:**

<b>Fn + F1</b> Музикален плейър	<b>Fn + F5</b> Предишна песен
<b>Fn + F2</b> Намаляване на звука -	<b>Fn + F6</b> Следваща песен
<b>Fn + F3</b> Увеличаване на звука +	<b>Fn + F7</b> Възпроизвеждане / пауза
<b>Fn + F4</b> Без звук	<b>Fn + F8</b> Стоп

<b>Fn + F9</b> Web/Home
<b>Fn + F10</b> Email
<b>Fn + F11</b> My computer
<b>Fn + F12</b> Favorites

**Troubleshooting**

Problem	Solution
The keyboard does not work properly	1. If some standard keys do not work on the keyboard, there may be a cable problem. You need to check that the cable is connected properly in the USB socket or connect it to another USB port or computer. 2. It is possible that one of the keys is "fused". Keypad faults can be caused by a technological defect in the keyboard, as well as a from debris or water in the keyboard. It's not recommended to perform self-cleaning of the keyboard.

If the actions from the above list do not contribute to problem solving, please contact the support team at Canyon: <http://canyon.eu/ask-your-question>

<b>Fn + F9</b> Уеб / Начало
<b>Fn + F10</b> Имейл
<b>Fn + F11</b> Моят компютър
<b>Fn + F12</b> Предпочитани

**Отстраняване на неизправности**

Проблем	Решение на проблема
Клавиатурата не работи коректно	1.1 Ако някои стандартен клавиш на клавиатурата не работи, може да има проблем с кабела. Трябва да проверите дали кабелът е свързан правилно към USB слота или свържете клавиатурата към друг USB порт или компютър. 1.2 Възможно е един от клавишите да е „запленал“. Неизправностите в клавиатурата могат да се дължат на фабричен дефект или на попадане на течности в клавиатурата. Не се препоръчва да се извършва самопочистване на клавиатурата.

Ако горните действия не помогнат, свържете се с екипа за поддръжка на Canyon: <http://canyon.eu/ask-your-question>

**EN**

**Features:**  
**Wired multimedia keyboard KB-50**  
12 multimedia functions  
**Cable length:** 1.5 m  
**Number of keys:** 104/105  
**Lifespan:** 10 million clicks  
**Dimensions:** 434.2x145.4x27.2 mm  
Compatible with Windows OS / MAC OS

**User manual**

Package contents	Connection
Wired keyboard	For correct operation of the keyboard, connect it to the USB port of a personal computer / laptop / all-in-one.
User manual	After turning on the computer and installing the operating system standard drivers – the keyboard will be ready for use

**BG**

**Характеристики:**  
**Кабелна мултимедийна клавиатура KB-50**  
12 мултимедийни функции  
**Дължина на кабела:** 1,5 м  
**Брой бутони:** 104/105  
**Жизнен цикъл на бутоните:** 10 милиона клика  
**Размери:** 434,2x145,4x27,2 мм  
**Съвместимост:** Windows OS / MAC OS

Съдържание на пакета	Свързване
Клавиатура с кабел	За правилна работа на клавиатурата, я свържете към USB порт на персонален компютър / лаптоп / all-in-one
Ръководство за употреба	След включване на компютъра и инсталиране на стандартни драйвери на операционната система - клавиатурата ще бъде готова за употреба.

